

# OWNER'S MANUAL

**Read Instructions Before Using Your New ELECTRIC  
SCOOTER**



(picture might be various)

# TABLE OF CONTENTS

TABLE	OF
CONTENTS.....	2
IMPORTANT INFORMATION.....	3-4
QUICK REFERENCE.....	5
GETTING TO KNOW YOUR ELECTRIC SCOOTER.....	6
PACKAGING CONTENTS.....	6
OPERATION OF SCOOTER.....	7-9
MAINTENANCE SCHEDULE.....	10
TROUBLESHOOTING GUIDE.....	11

PLEASE BE SAFE WHEN RIDING

ALWAYS WEAR A HELMET AND OBEY ALL LAWS!

**IMPORTANT**

**BATTERY MAINTENANCE and**  
**CHARGING INSTRUCTIONS**

1. You **MUST** charge completely prior to initial use. (Follow charging instructions in your Product Handbook)
2. Charge immediately after each use.
3. Charge before storage. You must charge every 30 days if not in use.
4. Charge the unit for 6-7 hours or until the light on the charger turns red & green.
5. **DO NOT** allow this unit to deep discharge the battery.
6. For safety purposes, **DO NOT** charge for over 24 hours.
7. Turn the unit **OFF** when not in use.

**Failure to follow these INSTRUCTIONS will**  
**VOLD YOUR WARRANTY!**

This **PRODUCT IS NOT INTENDED FOR EXTREME or ROAD Use!** Please take care of your Electric scooter!

**DO NOT JUMP or ABUSE THIS PRODUCT!**

**DO NOT RIDE IN WET/ICY CONDITIONS!**

Failure to follow these INSTRUCTIONS will

**VOLD YOUR WARRANTY!**

# IMPORTANT

PLEASE READ THIS BEFORE USING THIS PRODUCT

**READ THIS FIRST!**

## **WARNING**

This product does not conform to Federal Motor Vehicle Standards and is not intended for operation on public streets, roads or highways. Serious injury can result from the unsafe operations of this product. Operator can minimize these risks by using certain safety equipment such as: safety helmet, goggles, gloves, elbow and kneepads and appropriate footwear.

DO NOT operate this product in traffic, on wet, frozen, oily or unpaved surfaces or under the influence of drugs and/or alcohol. Avoid uneven surfaces, potholes, surface cracks and obstacles.

DO NOT use a water hose to clean this product. See Product Handbook for more information.

This product is recommended for riders 16 YEARS OF AGE and older.

## **SAFETY**

- Persons without excellent vision, balance, coordination, reflex, muscle and bone strength and good decision-making capabilities should not use this product.
- Persons unwilling or unable to take responsibility for their own actions should not use this product.
- The user of this product assumes ALL risks associated with its use. To minimize these RISKS, the user must wear safety helmet, goggles, gloves, elbow and kneepads and appropriate footwear.
- This product is ELECTRIC! DO NOT ride this product in wet conditions, puddles or rainy weather.

## **QUICK REFERENCE SAFETY GUIDE**

### **SAFETY GUIDE**

- The recommended minimum age for riding this electric scooter is 16 years old.
- To avoid damage to the motor and footplate, do not overload the electric scooter.
- Never ride with more than one person.
- Inspect your electric scooter thoroughly before each use for loose or missing parts.
- Avoid unintentional starts by turning the electric scooter off while not in use.
- To avoid the risk of a short circuit in the electrical parts, do not use your Electric scooter in the rain and never spray or wash off your Electric scooter with water.
- Do not place the battery near fire or heat.
- To avoid damage to the battery, do not use the charger if it has been damaged in any way.
- Keep hands, face, feet and hair away from all moving parts.
- Do not touch the motor or wheels while they are rotating.
- Brakes are designed to control speed as well as stop the electric scooter. Practice braking for proper slowing down and smooth stops.
- Maintain your Electric scooter as recommended in this product handbook.
- Use only quality replacement parts as recommended by the manufacturer.
- Inspect the entire Electric scooter prior to each use. Replace any part that is cracked, chipped or damaged before use.

**\*NEVER ALLOW CHILDREN TO OPERATE THE ELECTRIC SCOOTER.**

**\*NEVER ATTEMPT TO OPERATE THE ELECTRIC SCOOTER WHILE UNDER THE INFLUENCE OF ALCOHOL.**

**If a situation arises that is not covered in the manual,  
proceed with caution and use good judgment.**

**Contact your dealer**

# GETTING TO KNOW YOUR ELECTRIC SCOOTER



## **PACKAGE CONTENTS**

Your scooter comes with the following items in the box. Please locate all of the following:

1. Electric scooter
2. Battery Charger
3. User Manual

## **OPERATION OF SCOOTER**

### **1. Ignition**


Insert key into ignition and turn clockwise to turn the scooter on. The battery indicator bars will display the current charge level when on. Turn the key counter-clockwise to power off when stopped.

Note:if you want to lock the steering bar,first turn the handbar left then Turn the key anticlockwise to lock position to lock the steering bar.



### **2. LCD DISPLAY**

**We can operated the button on display to control the speed and lights.**

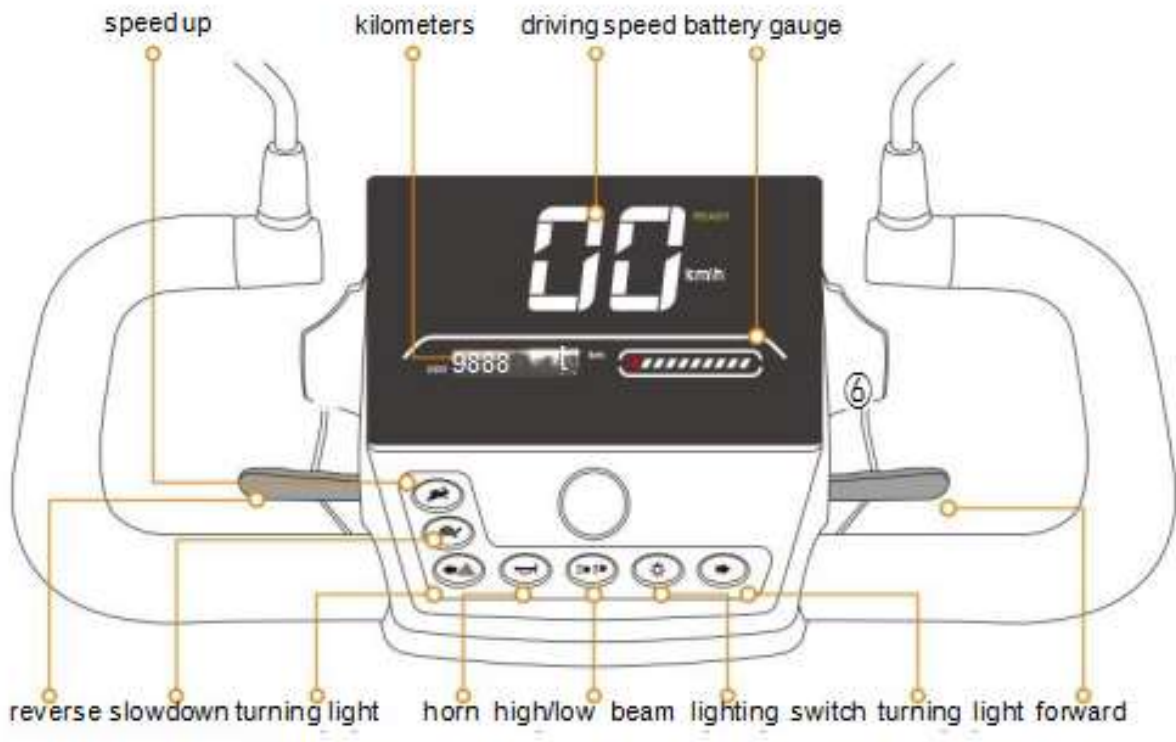

**3.Circuit Breaker**

The blue circuit breaker switch underneath the seat must be turned on to operate the scooter, and must remain on while charging.






#### 4.Throttle lever



**Forwards**

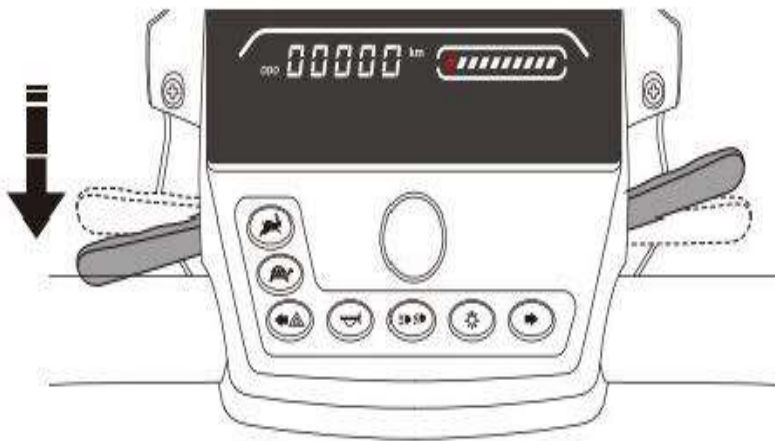

**Backwards**

#### **CHARGING**

Your Electric scooter comes charged out of the package. We still recommend charging the unit for 6-7 hours prior to it's first use. We also recommend charging your electric scooter after each use and prior to storage.

**WARNING: Do not** allow your Electric scooter to go into deep discharge, as this will damage the batteries.

1. Make sure unit is turned off.(Ignition off but circuit breaker should be ON position)
2. Open the charging socket cover located on the rear of the plastic parts under the seat .
3. Locate your Battery Charger.Find the charger socket,and plug it into the Electric scooter .
4. Next, plug the AC plug into a wall outlet.

When first plugged in, the charger has one red light that will illuminate at the same time, indicating that the charging process has started. Once the light on the charger turns red & green, you may remove the charger and close the safety cap.

## MAINTENANCE SCHEDULE

Proper care of your Electric scooter will insure optimal performance and longer life span. The following are a few maintenance suggestions that will keep your Electric scooter running in top condition:

### Daily Maintenance

Perform each time you ride your Electric scooter

- Clean the exterior of the unit with a soft, damp rag. (DO NOT WASH WITH A HOSE)
- Check that all nuts and bolts are securely tightened.
- Lubricate the chain with any silicone spray, 3&1 oil or any good clean motor oil.
- Check battery charger for any frayed/cut wires.

## TROUBLESHOOTING GUIDE

SYMPTONS	POTENTIAL CAUSE	SOLUTION
The charger light turns green & red right away	<ol style="list-style-type: none"> <li>1. This indicates the batteries are adequately charged.</li> <li>2. Bad circuit breaker or open connection between charger socket and batteries.</li> </ol>	<ol style="list-style-type: none"> <li>1. Continue to charge the batteries for 6-7 hours prior to initial use.</li> <li>2. Check circuit breaker: Look for loose or disconnected wire</li> </ol>
Batteries do not hold a charge. Unit does not have specified travel range.	<ol style="list-style-type: none"> <li>1. Batteries have reached the end of their useful life.</li> <li>2. Charger is malfunctioning.</li> </ol>	<ol style="list-style-type: none"> <li>1. Replace Batteries</li> <li>2. Replace Charger Unit.</li> </ol>
Unit moves intermittently or very slow.	<ol style="list-style-type: none"> <li>1. Batteries not fully charged.</li> <li>2. Loose Wire.</li> <li>3. Bad Throttle or controller.</li> </ol>	<ol style="list-style-type: none"> <li>1. Charge or replace batteries.</li> <li>2. Check for loose wires</li> <li>3. Replace</li> </ol>
Unit will not move when throttle lever is activated.	<ol style="list-style-type: none"> <li>1. Batteries not fully charged.</li> <li>2. Brake switch out of adjustment</li> <li>3. Batteries have reached the end of their useful life.</li> </ol>	<ol style="list-style-type: none"> <li>1. Replace batteries or charger.</li> <li>2. Loosen brake</li> <li>3. Replace batteries.</li> </ol>
Unit stops abruptly during use.	Loose or broken wire.	Check for loose or broken wires and repair/replace.

**OTHER QUESTIONS**

*For additional questions, please contact your local dealer .*

**Thank you for purchasing and please tell your friends how much fun you're having on the Electric scooter**